

EXPANSION JOINTS



Features

ERRE.DI expansion joints are needed whenever you have to deal with piping movements and misalignments.

Depending on the direction of these movements, we provide different kinds of joints: **axials, angulars and combined.**

