



## **SWIVEL JOINTS**





ERRE.DI swivel joints are used in situations where, due to mechanical stress on the system, a certain rotation degree is necessary.

The pression to which the system is subject could be very high, but this applies only to a low speed rotation.


ERRE.DI swivel joints ensure a completely free passage of the fluid.


Several configurations are possibile, according to the needed rotation degree:


## **Basic configurations**


STYLE 20x3










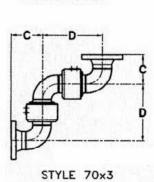

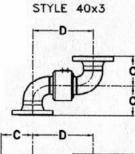

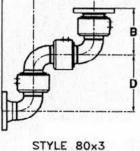

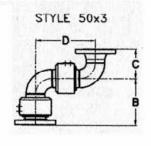

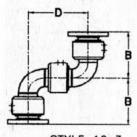

STYLE 10x3